

Иллюстрация Starter assy

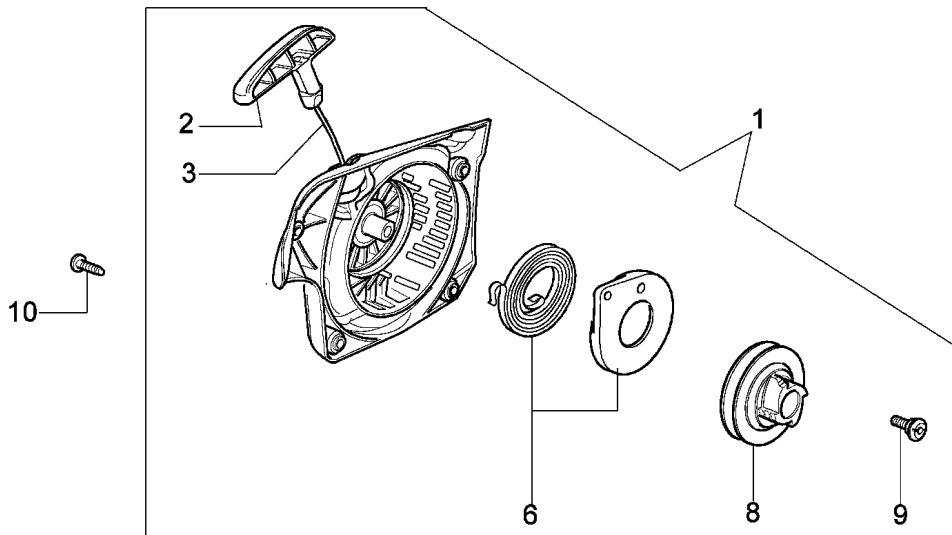
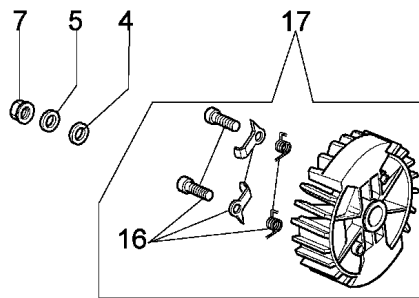
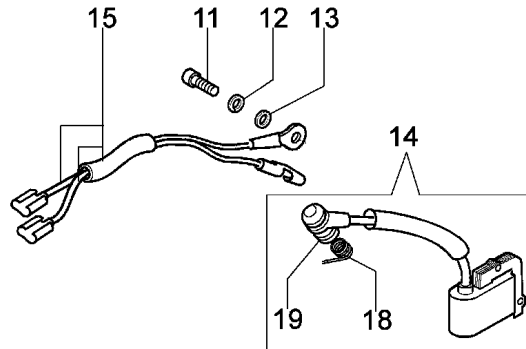


Иллюстрация Starter assy

Ссылка №	Кол-во	Код артикула	Наименование
1	1	50172002R	Starter assy
2	1	50170017R	Handle
3	1	50070123R	Starter rope
4	1	005000361	Washer
5	1	3833080	Washer
6	1	50050073R	Spring
7	1	004000142	Nut
8	1	50170050R	Starter pulley
9	1	50160024	Screw
10	4	3960115R	Screw
11	2	3960075	Screw
12	2	006000315	Washer
13	2	3916004	Washer
14	1	50170144BR	Ignition coil
15	1	50170090R	Cable
16	1	50072029	Pawl
17	1	50170015R	Flywheel
18	1	50050127	Spring
19	1	50050126	Spark plug cap

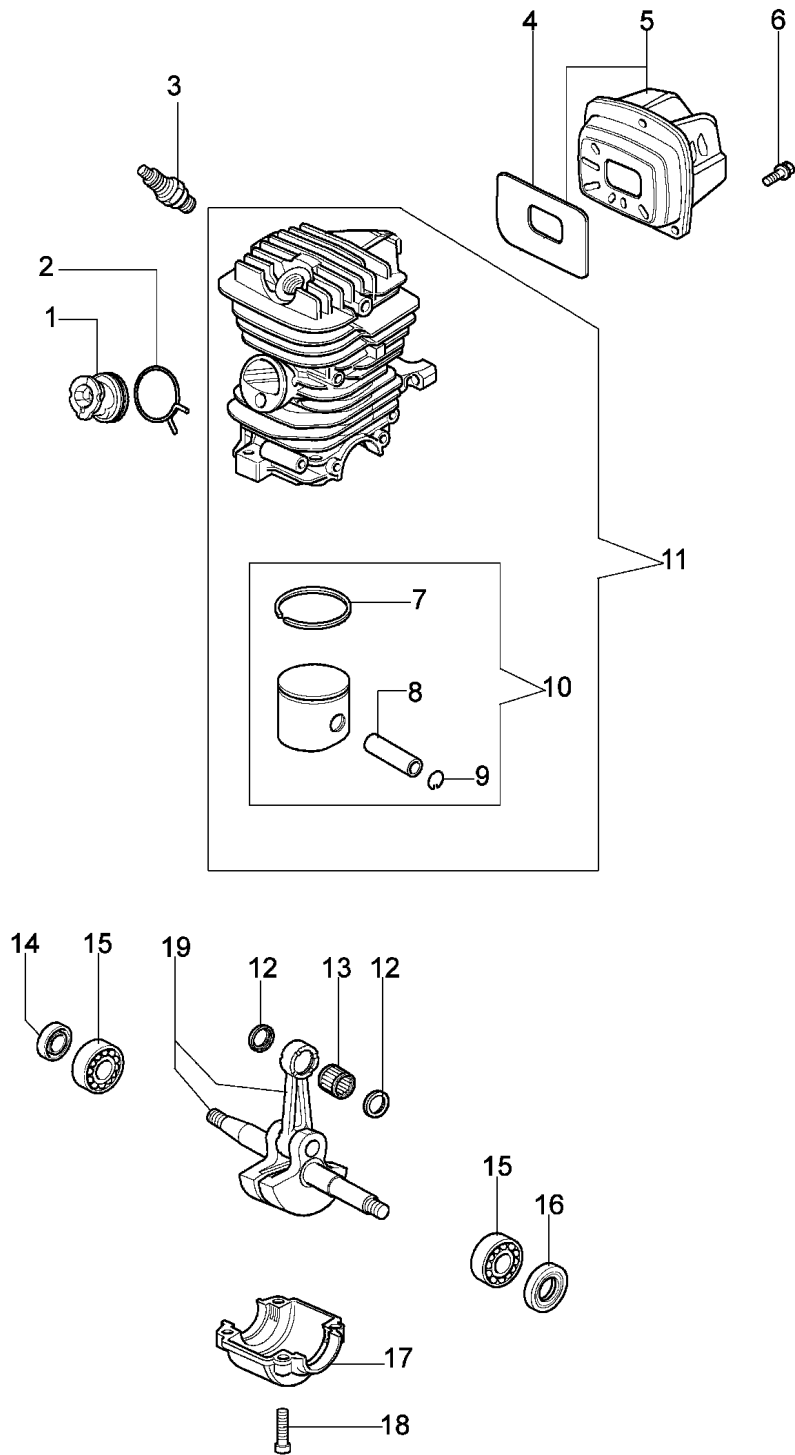


Иллюстрация Engine

Ссылка №	Кол-во	Код артикула	Наименование
1	1	50170010R	Manifold
2	1	094600103	Band
3	1	3055101	Spark plug
4	1	50170031R	Gasket
5	1	50170027R	Muffler
6	3	3860117R	Screw
7	1	003300015R	Piston ring
8	1	50110047R	Piston pin
9	2	004900061R	Ring
10	1	50110066	Piston assy Ø38
11	1	50182005	Complete cylinder
12	2	50110043R	Spacer
13	1	50110044R	Bearing
14	1	3050022R	Seal ring
15	1	094000006R	Bearing
16	1	3050024R	Seal ring
17	1	50050016R	Cover
18	4	3801047	Screw
19	1	50110045R	Crankshaft

Иллюстрация Crankcase

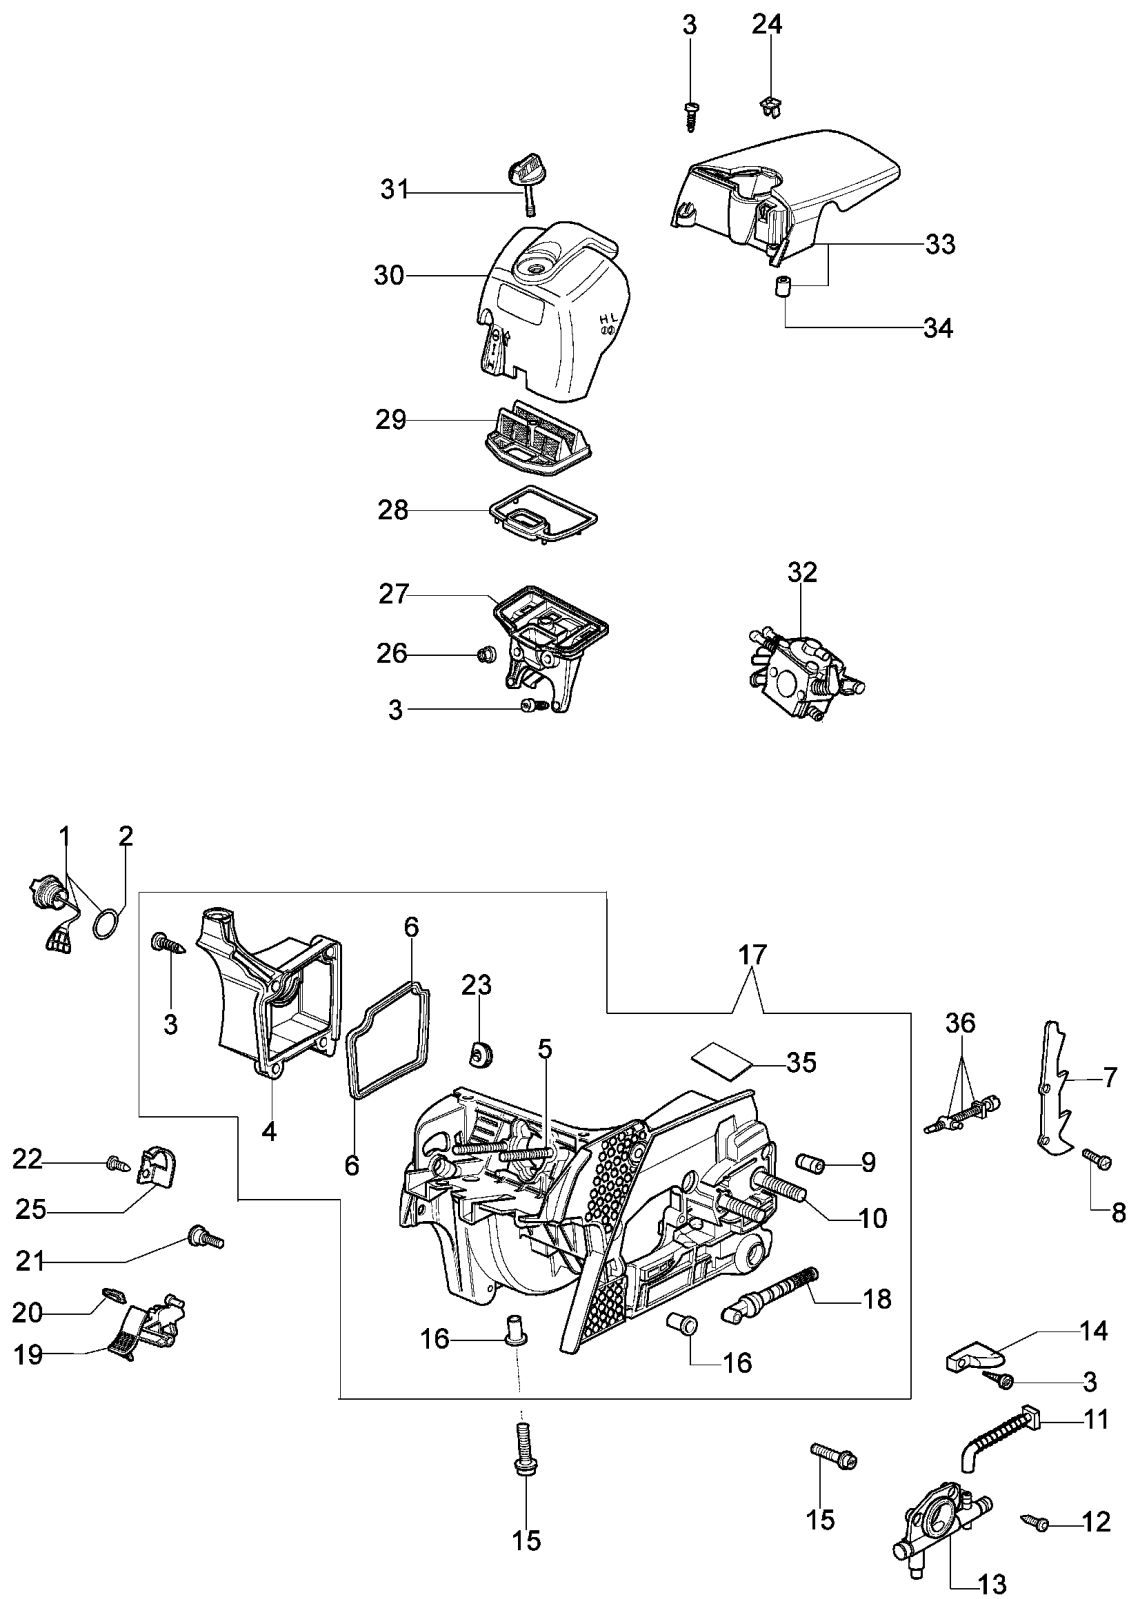


Иллюстрация Crankcase

Ссылка №	Кол-во	Код артикула	Наименование
1	1	50052005R	Tank cap
2	1	3049025	O-ring
3	5	3960115R	Screw
4	1	50170071R	Cover
5	11	50070067A	Rod
6	1	50170004R	Gasket
7	1	50170042R	Spike
8	2	3960099R	Screw
9	1	097000229R	Breather valve
10	2	50050052	Stud
11	1	50050049R	Hose
12	3	3960074	Screw
13	1	50180007AR	Oil pump
14	1	094600369R	Guard
15	5	3860097	Screw
16	5	50050067	Spacer
17	1	50172009R	Crankcase assy
18	1	50170149R	Oil filter
19	1	50170060AR	Lever
20	1	50170062R	Plate
21	1	50160024	Screw
22	1	3960070AR	Screw
23	1	005000347A	Grommet
24	1	50170032R	Deflector
25	1	50170061R	Spring
26	2	3933100R	Nut
27	1	50170132R	Support
28	1	50050056BR	Gasket
29	1	50110005R	Air filter
29	1	50170231R	Air filter optional
30	1	50170079AR	Cover
31	1	50110007R	Knob
33	1	50172020R	Cover
34	1	50070126R	Spacer
35	1	50170033R	Guard
36	1	50050133	Chain tensioner

Иллюстрация Tank-handle

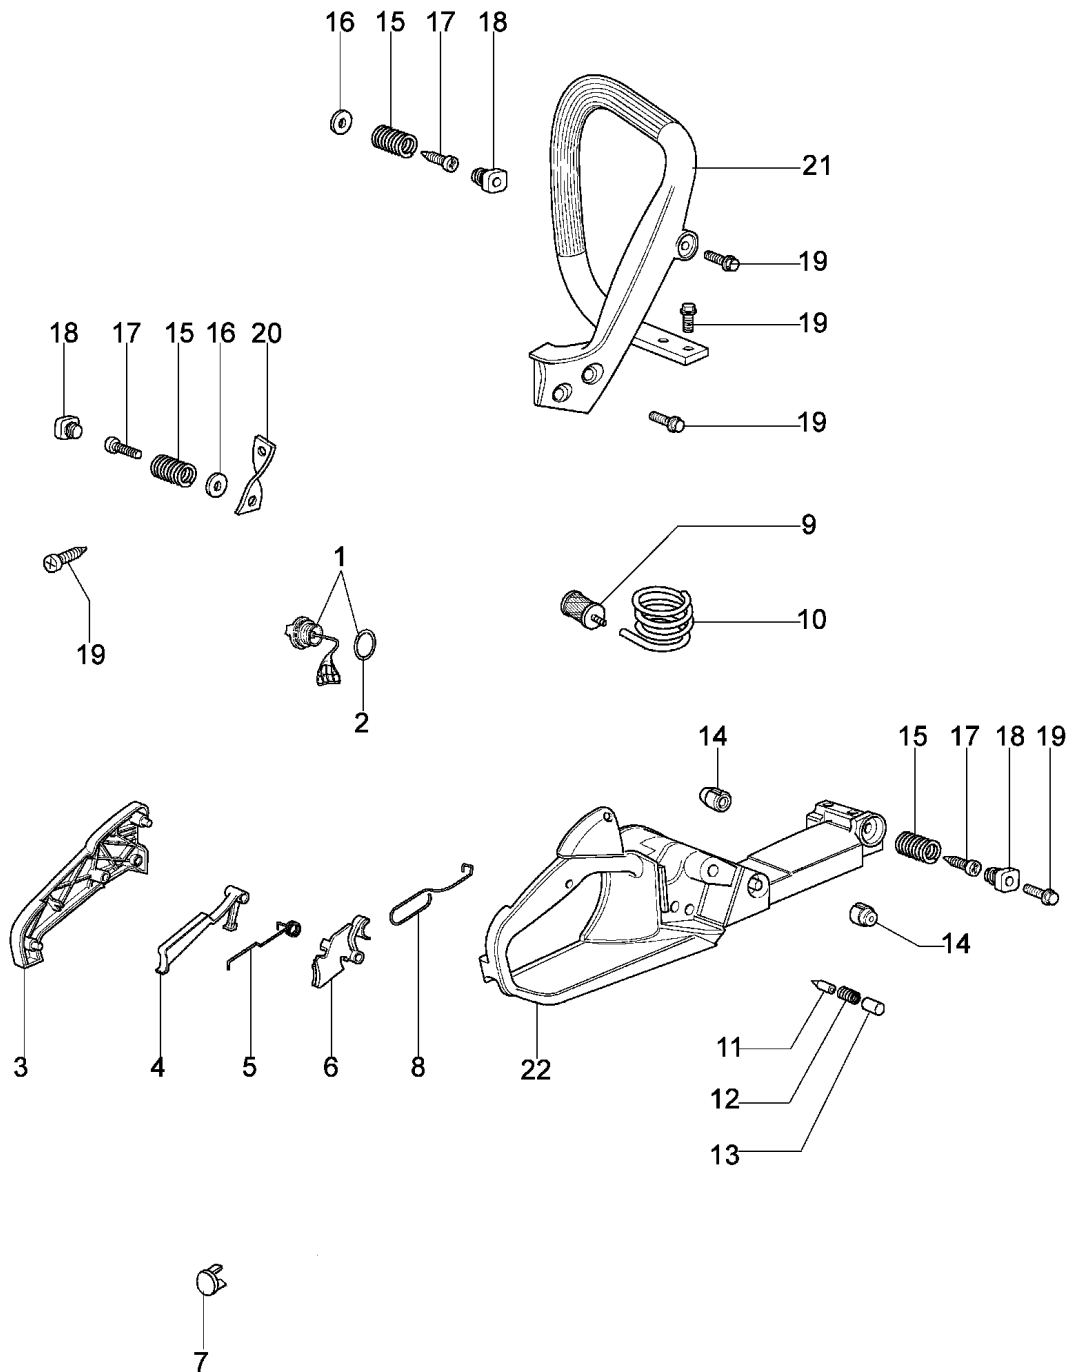


Иллюстрация Tank-handle

Ссылка №	Кол-во	Код артикула	Наименование
1	1	50052005R	Tank cap
2	1	3049025	O-ring
3	1	50170024R	Cover
4	1	50050096AR	Lever
5	1	097000028R	Spring
6	1	50170067R	Throttle
7	1	50050072	Cap
8	1	50170012R	Throttle rod
9	1	094600450R	Fuel filter
10	1	50170152R	Hose
11	1	094500577A	Valve
12	1	094500575R	Spring
13	1	50050071	Breather valve
14	3	50010061R	Shock absorber
15	3	50050047R	Spring
16	7	3918010R	Washer
17	3	3960115R	Screw
18	3	50170034R	Support
19	7	3960099R	Screw
20	1	50050123R	Strap
21	1	50170026R	Handle
22	1	50172007R	Tank

Иллюстрация Clutch-brake

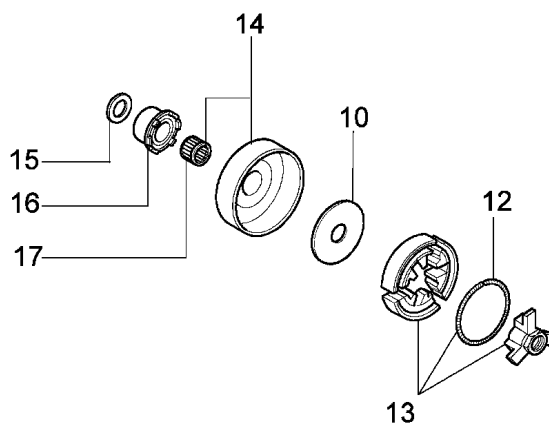
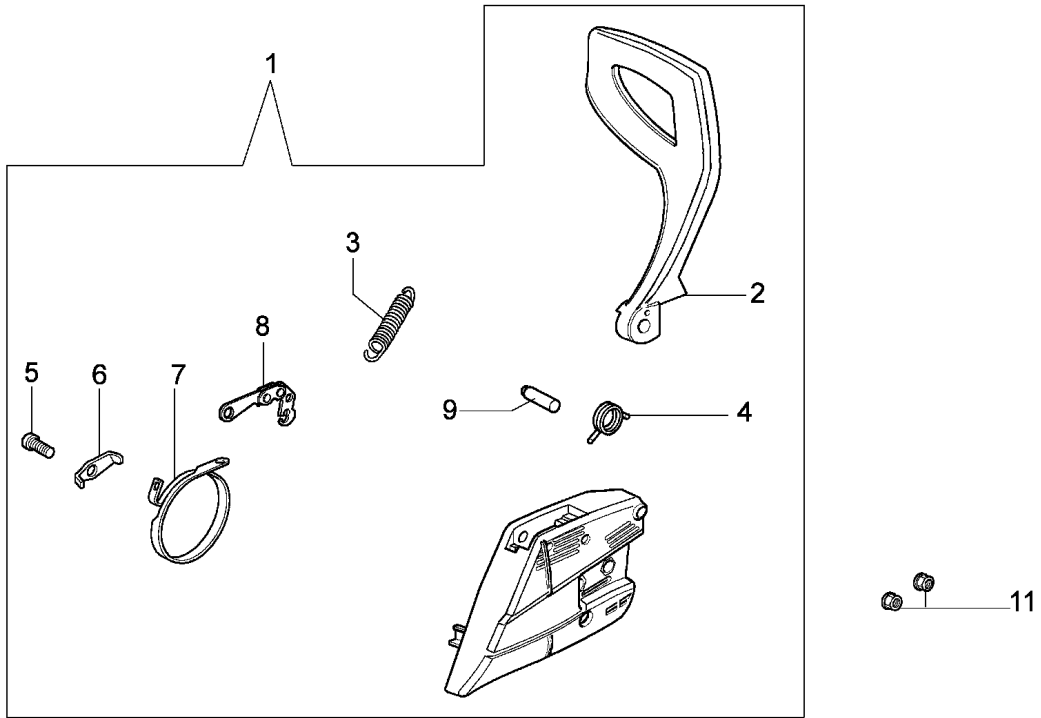


Иллюстрация Clutch-brake

Ссылка №	Кол-во	Код артикула	Наименование
1	1	50170129R	Chain cover assy
2	1	50170040R	Guard
3	1	095000219R	Spring
4	1	50010088AR	Spring
5	1	3960070AR	Screw
6	1	50050125R	Plate
7	1	50050039	Brake band
8	1	097000146	Lever
9	1	50050064	Pin
10	1	004000352	Washer
11	2	50010148R	Nut
12	1	094500029	Spring
13	1	094000129AR	Clutch
14	1	50050136A	Chain sprocket 3/8
15	1	004400285	Washer
16	1	50050025	Worm gear 3/8
17	1	50030372	Bearing

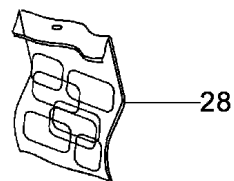
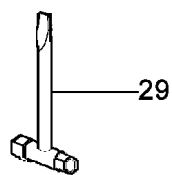
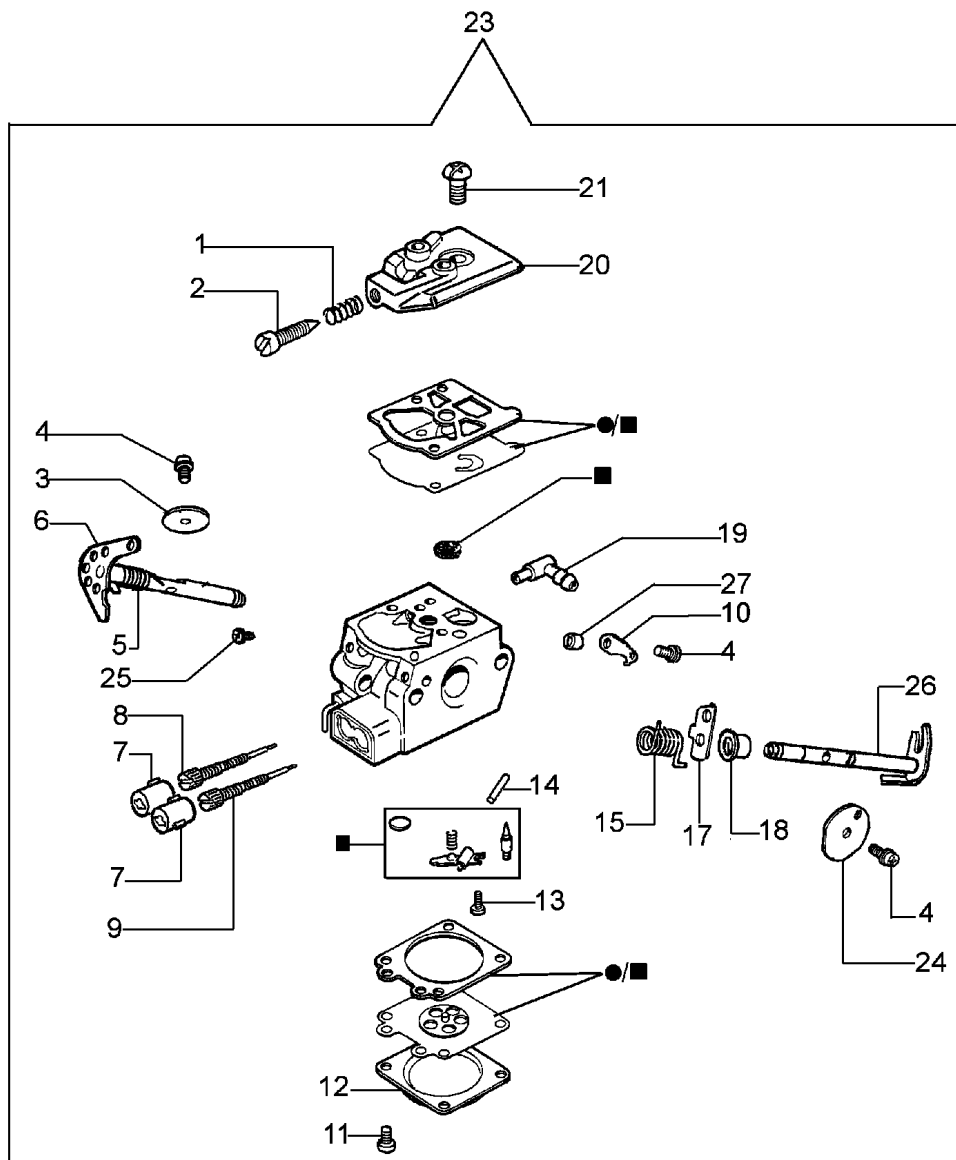


Иллюстрация Carburetor WT-781B

Ссылка №	Кол-во	Код артикула	Наименование
1	1	094600148	Spring
2	1	074000240	Adjust.screw
3	1	095000141	Shutter
4	3	50010141	Screw
5	1	094600208	Spring
6	1	2318757	Shaft
7	2	2318867	Cap
8	1	2318837	Screw L
9	1	2318893	Adjust. screw
10	1	50050108	Throttle lever
11	4	035000162	Screw
12	1	2318191	Cover
13	1	003300202	Screw
14	1	003300201	Spindle
15	1	50050115	Spring
16	1	094600209	Repair kit
17	1	50050111	Lever
18	1	50050109	Bushing
19	1	50050160	Fitting
20	1	50050107	Cover
21	1	003300197	Screw
22	1	094600210	Kit guarn
24	1	094600140	Shutter
25	1	50050117	Screw
26	1	2318758	Shaft
27	1	50050110	Bushing
28	1	50182004	Labels set
29	1	2304073	Wrench 13x19